
 
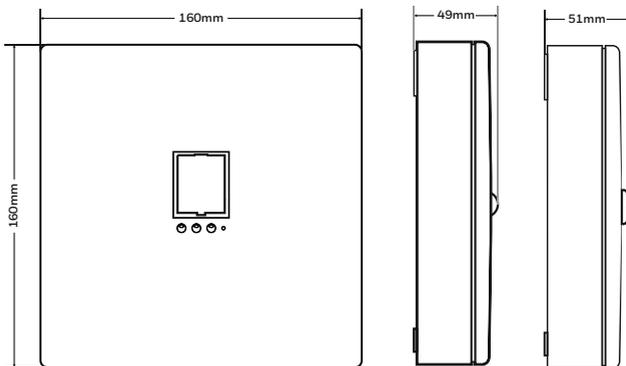


Dimensional Drawings:



Installation:

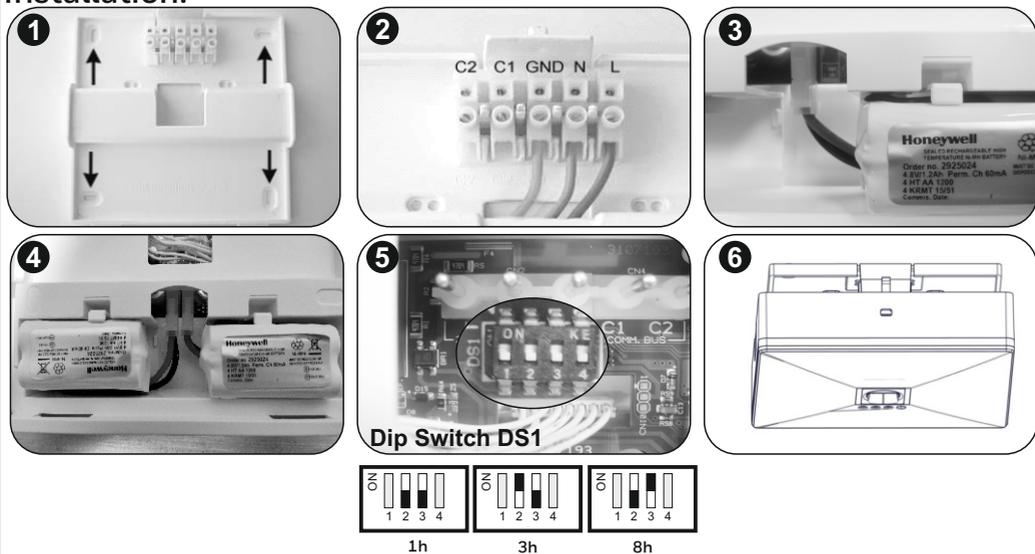

Step 1: Mount the socket.

Step 2: Connect the mains cables L, N and GND (optional) to the terminal block. The ground terminal is optional. Power supply cables cross section should be 0,8 – 3 mm². The C1 and C2 terminals are used for eBUS communication (optional), DALI communication (optional) or voltage free contact (optional).

Step 3: Connect the battery cable to its respective connector on the PCB.


Step 4: For accomplishing 8h autonomous light, an extra battery is required (Part No. 2925024). Connect the battery cable to its respective connector on the PCB.

Step 5: The user can select one of the 3 available minimum autonomy durations: 1 hour, 3 hours and 8 hours. The selection must be done while the luminaire is disconnected from AC and battery supplies. The selection is achieved through Switches 2 & 3 of DS1 according to image above. Switch 1 and 4 are not used. Two additional labels are included in the package, one for 3 hours duration (180) and one for 8 hours duration (480). Depending on the selected duration, the installer must cover the default 1 hour (60) printing with one that has the required duration.

Please take notice of the orientation of the label.

Step 6: Hook the luminaire to the two notches in the socket and push carefully until the plastic hook locks.

Disassembly: Press the plastic hook (Picture 6) using e.g. screwdriver and carefully pull the luminaire down.

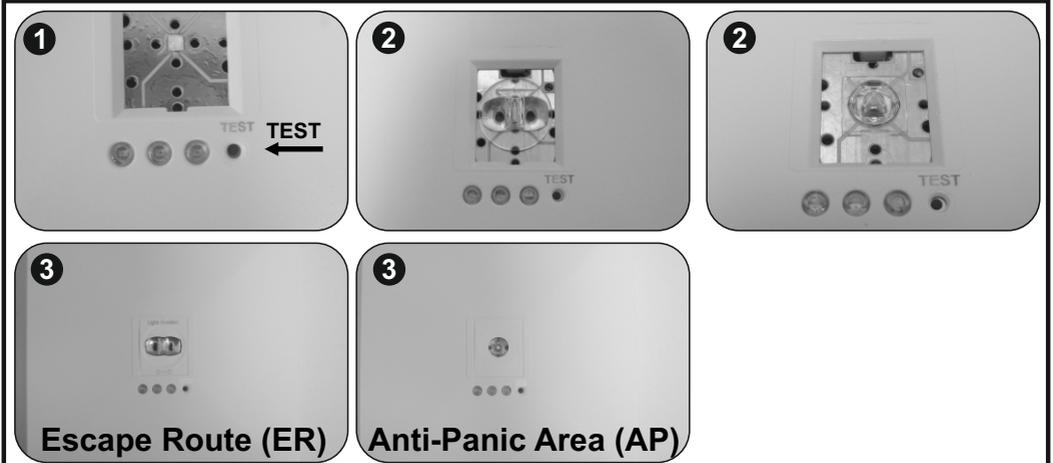

Step 1: A test button for manual tests and reset is located next to the indications LEDs.

In order to place the proper lens (Anti - panic or escape route), first be sure that the luminaire is not connected in the mains power supply and the battery is disconnected. A 5 lux lens (Part no. 2900XX.STR) is also available for order. Be careful not to touch the LED with your hand.

Step 2: Place the proper lens (Anti - panic or escape route) on the luminaire.

Step 3: Place the proper retaining cover (Anti - panic or escape route) on the luminaire.

NOTE!! After finishing the installation you must power the luminaire for at least 24 hours in order to completely charge the battery. The rated autonomy duration can be achieved after that time.

Important notice when installing luminaires within the same area!!!

To avoid that luminaires perform their battery test at the same day, connect the battery packs with more than 1,5 minutes inbetween.

Technical description	Ova-OmniLED Square ER/AP NM ST LED 230V 138	
Part no.:	138006	
Operation Voltage:	220-240V AC, 50-60 Hz	
Maximum Power Consumption:	1h & 3h: 3.4W / 3.9VA	8h: 5W / 5.3VA
Battery (NiMH):	1h & 3h: 4.8V / 1.2Ah	8h: 2x4.8V / 1.2Ah
Battery Protection:	Overcharge protection / full discharge protection	
Insulation between supply & battery circuit	Basic Insulation	
Charging Time:	1h & 3h: 16 hours	8h: 23 hours
Emergency Mode Duration:	1h / 3h / 8h manually selected (default 1h)	
Lumen output, emergency:	1h: 360lm / 3h: 170lm / 8: 145lm	
Produced in accordance with:	EN 60598-1, EN 60598-2-22, EN 55015 EN 61547, EN 61000-3-2, EN 61000-3-3	
Ambient Temperature Range:	5 to 40 °C	
Relative Humidity:	Up to 95%	
Degress of cover protection:	IP20	
Technical lifetime (light source):	> 100000 hours	
Weight:	618 gr	
Expected Battery Lifetime:	4 years	
Controlgear classification in accordance with IEC 62034: with automatic test function		
The controlgear is proof against supply voltage polarity reversal.		
The controlgear has mains-connected windings of transformer.		

Indicator LEDs	Description	
GREEN  YELLOW  RED 	Normal	 <div data-bbox="621 399 1075 542">  <p>The light source contained in this luminaire shall only be replaced by the manufacturer, or his agent, or a similar qualified person.</p> <p>NOTE! The light source is non-user replaceable.</p> </div> <div data-bbox="621 558 1075 702"> <p>At the end of their useful life the packaging, product and batteries should be disposed of via a suitable recycling centre. Do not dispose of with your normal household waste. Do not burn.</p>  </div>
  	Charging (battery test not possible while charging)	
  	Mains off, battery not connected or charger fault	
  	Battery test	
  	Battery fault	
  	Light source test	
  	Light source fault	
  	Battery fault and light source fault	
<p style="text-align: center;">LED Status explanation</p>  Off  On  Flashing		

The **Ova/OmniLED** is a self-contained non-maintained luminaire with selftest function.

Selftest functions

Every 15 days the luminaire will perform an emergency operation test. This will light the white LED for approximately 3 seconds. The red LED will flash during this test sequence.

Every 6 months the luminaire will perform a battery condition test. The test will last for the stated duration. The white LED will be lit and the yellow LED will flash during this test sequence.

Note: When using DALI or Wireless communication, the frequencies and schedules for tests will instead be determined by the connected PC software.

Manual test functions

Manual tests can only be performed if both mains and battery are connected.

By pressing the test button briefly (less than 5 seconds) an emergency operation test is performed. The white LED will be lit for approximately 3 seconds, the red LED will flash during this test sequence.

By pressing the test button for between 5 and 10 seconds a battery condition test is performed. This test will last for the stated duration and can only be performed when the battery is fully charged (steady green LED). The white LED will be lit and the yellow LED will flash during this test sequence.

Resetting errors

Push the test button for >10 seconds to delete all indicated errors. Then the luminaire enters regular operation mode.

Note: In case of mains power disconnection for a period of more than two months, the battery must be disconnected.

Note: In case of battery replacement, this must be replaced with parts of the same type and characteristics. The replacement must be performed by the manufacturer or a competent person.

Note: If the supply cable of the luminaire is damaged, it shall exclusively be replaced by a competent person in order to avoid hazard.